

ENGLISH

WAX HEATER model: YLD-50

USER'S MANUAL

Introduction

For best results, read all instructions before using the heater.

WARNING! Always check the wax temperature before use! Very hot wax can cause burns!



1. Warnings and safety

Product safety is only guaranteed if it is used correctly and exactly according to the instructions in this manual. If any problem occurs, contact the manufacturer or distributor. If the power cord is damaged, it must be replaced by an authorized service center.

- Attention, basic precautions should be observed when using any electrical device, especially in the presence of children.
- The device cannot be used in the bathroom or other wet rooms.
- Do not expose to solar radiation.
- There should be no other devices with high temperature near the device.
- Do not disassemble the device.
- Remove the plug from contact and stay in contact with an authorized service in the following situations: the device has been in contact with water, emits a strange smell, smoke or noise, the cable has been damaged, the device has fallen and is damaged.
- Do not put anything on the cable, do not place the device in a place where someone can step on the cable.
- For safety reasons, pull the plug out of the socket even when the device is not in use.
- Do not place the device on an unstable surface, avoid tipping over or damage.
- For professional use only.

Technical parameters:

- Input: 220V-230V, 50-60Hz
- Power: 180W (max)

2. Use

1. Lift the lid and place the wax inside the wax cleaner. Cover the lid.
2. Insert the plug into the socket.
3. Turn the temperature knob and set it to "Hi" until the wax reaches a liquid consistency. This process takes about 20 minutes.
4. When the wax is dissolved, set the right temperature and stay constant.
5. When the wax is over, remove the can.

6. When you are not using the device, switch it off and pull the plug out of the socket.

7. Remember to clean the device regularly.

Notes and precautions

- Do not expose the device to direct sunlight, water, humidity, dust or large temperature fluctuations.
- For cleaning only use a slightly damp cloth, without using aggressive detergents.
- If the power cord is damaged, it must be replaced at the service center with a new one of the same type.
- Keep out of the reach and sight of children. Do not use in case of skin damage or disease.
- Contraindications - any skin disease.
- Avoid waxing areas of the skin with wounds, sunburn, irritation, varicose veins, acne!
- Avoid contact with eyes! In case of contact with eyes, rinse immediately with plenty of water for at least 10 minutes.

3. Information for users about disposal of electrical and electronic equipment (applies to households)

The symbol shown on the products or the accompanying documentation indicates that faulty electrical or electronic devices must not be disposed of as household waste. Proper conduct in the event of the need to dispose of, reuse or recover components consists of handing over the device to a specialized collection point, where it will be accepted free of charge. The used product can be returned to your local distributor when you buy a new device. The correct disposal of your device allows you to save valuable resources and avoid any negative impact on health and the environment, which could be compromised by inappropriate waste handling. Detailed information on the nearest collection point can be obtained from your local authorities. Incorrect waste disposal is punishable by applicable local laws.

If you need to dispose of electrical or electronic devices, please contact your nearest dealer or supplier for additional information.



Made In China